

Contents

OWNVS-01 USE MANUAL

Digital Night Vision riflescope (HD)

Model: OWNVS-01


【Contents】

Product Description	3
Diagram	5
Component description	5
Operating Instructions	6
Install battery	6
Power on and Viewfinder	7
Power off	8
Observing scenery	8
Diopter adjustment	8
Focus adjustment	9
Mounting	9
Function button introduction	10
Video shooting	11
Video playback	11
Calibration	12

Contents

Change the reticle style and colors	14
WIFI on and off	15
Digital zoom	16
Brightness	17
Color mode settings	18
Loop recording	19
Language settings	20
Auto power off	21
Time format	22
Date/Time	23
Format	24
Default setting	25
VER version number	26
Maintenance	27
Troubleshooting	27
Firmware update	29
Basic parameters	30
The standard configuration	31
Precautions	32

PRODUCT DESCRIPTION

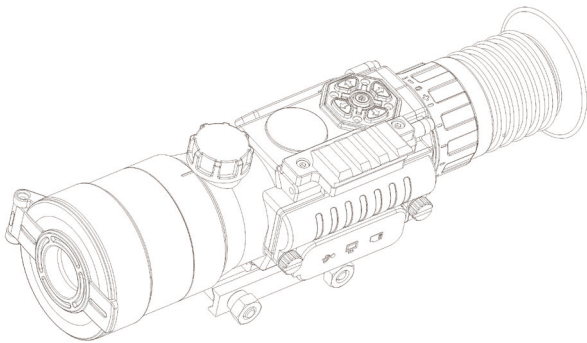

【Product Name】Digital Night Vision riflescope(HD)

【Model】 OWNVS-01

【Features】

◆ This product can be used in day and night, and the magnification is 3.7X~11X.

◆ In order to obtain a better full-color image, the machine is equipped with an infrared filter on the objective lens, and the infrared filter should be turned on when used at night;

◆ If the image is still not clear enough, you need to turn on the infrared lighting flashlight at the night;

PRODUCT DESCRIPTION

◆ Power supply: This product uses a 18650 large capacity rechargeable lithium battery


◆ Working time: 6 hours when WiFi is turned on, and 8 hours when WiFi is turned off;

◆ This machine comes with WiFi, which can be connected with the APP installed on the mobile device, and realize real-time image transmission, video recording, photographing and other functions in the APP;

◆ This product adopts 1080P ultra-low illumination detector;

◆ This product is the best auxiliary tool for human vision extension.

DIAGRAM

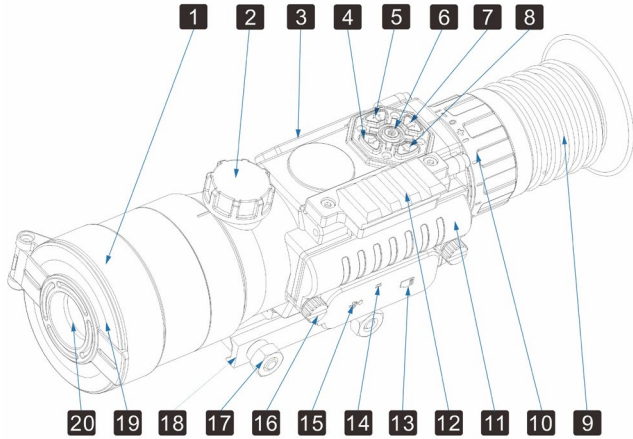

- 1.Objective lens 2. Focus Wheel 3.WIFI Module
4-8. Adjustment Button 9.eyepiece 10. diopter
adjustment 11. Battery cover 12. Infrared torch
metal base (optional) 13. SD card slot 14. Indicator
15. Video output interface 16. Battery cover knob
17. Base screw 18. Picatinny mount 19. Objective lens
cover 20. Filter

5

OPERATING INSTRUCTIONS

【Installing The Battery】

◆The product uses for one 18650 3350mAh battery , It is recommended to use the original packaging with batteries for best performance.

◆To install new battery


1. Unscrew the battery cover off counter clockwise .
2. Put the battery into the slot in the direction indicated.
3. Screw the battery cover clockwise until fully tightened.


Unscrew the battery compartment cover off. Insert a piece of battery in the compartment with the negative end to the spring. Then screw the compartment cover tightly. Turn on the riflescope by pressing button #8. If the built-in screen is not lit up, please make sure that the battery compartment is closed properly and tightly, and the battery is in correct direction with minimum voltage required. Then boot test until the apparatus works normally.

6

OPERATING INSTRUCTIONS

【Power on and Viewfinder】

◆Long press button (3 seconds)  , From the eyepiece eyecup 9, you can see that the internal display screen lights up, the display shows the normal icon shown in the figure below, and the machine enters the normal working state.

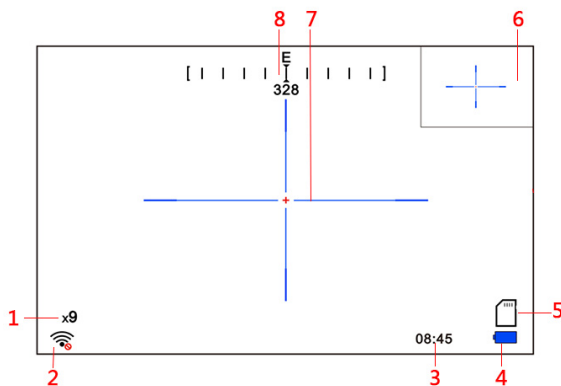


1. Magnification 2. WIFI status 3. Time
4. Battery status 5. Memory card status
6. Picture-In-Picture 7. Reticle 8. Electronic
compass


7

OPERATING INSTRUCTIONS

【Power off】

No matter what state the machine is in, press and hold the power button (3 seconds)  to shut down the machine.

【Observation Scenery】

◆Long press button  (3 seconds) to turn on the machine.

Observing from the eye mask 9, the display screen is lit;

- ◆After the machine is turned on, the image is a color image, suitable for observation and use during the day;
- ◆When it is used in a darker environment at night, if you cannot see clearly, you need to open the objective lens cover and turn on the infrared flashlight at the same time. The product image will switch to Black and White.

【Diopter Adjustment】

The eyepiece (1) is designed to rotate to adjust for diopter. The diopter is the measurement of the eye's curvature. People's eyes are all curved differently. If the display does not clear,

8

OPERATING INSTRUCTIONS

rotate the eyepiece until the reticle becomes clear and focused. This adjustment should stay the same unless the unit's operator changes.

【Focus Adjustment】

- ◆ 1. Locate the focus adjustment.
- ◆ 2. Turn the adjustment(2) left or right until the image becomes clear.

【Mounting】

The unit is fitted with a Picatinny mount.


To attach:

1. Loosen both mount thumbscrews.
2. Place mount on to Picatinny rail aligning the bolts with the Picatinny rail slots. Check eye relief and adjust to the proper position.
3. Tighten thumbscrews.

9

OPERATING INSTRUCTIONS

【Function button introduction】

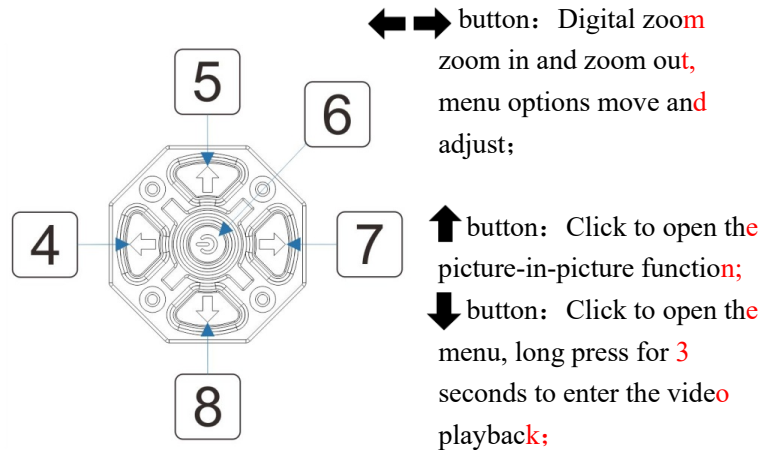

10

OPERATING INSTRUCTIONS

【Video shooting】

◆ Click the button Automatically enter the recording state, at this time, the upper left corner of the screen will display the recording time in red;

◆ Press again , the video is over, the machine automatically stores the video file in the SD card;

◆ The "loop recording" function in the menu can set the length of a single video file saved by recording;

Video resolution is 1080P.

【Video playback】

◆ Long press the button , Enter the video file playback interface, press the button play video, Press the button to forward and rewind;

◆ press the button Switch playback video, press the button exit the playback interface.

11

OPERATING INSTRUCTIONS

【Calibration】


◆ 1. Select "Reticle Setting" in the menu interface, press the button Enter calibration, At this time, there will be five distance options of 0-99m, 100-199m, 200-299m, 300-399m, 400-499m, which are selected according to the shooting target distance range (to help users calibrate in the fastest time);



◆ 2. Enter the "Reticle Setting" interface, adjust the XY coordinates to align with the bullet hole position, Move the X coordinate, move the Y coordinate (one XY coordinate unit = 1/4 mil), press to save after the adjustment is completed;

12

OPERATING INSTRUCTIONS

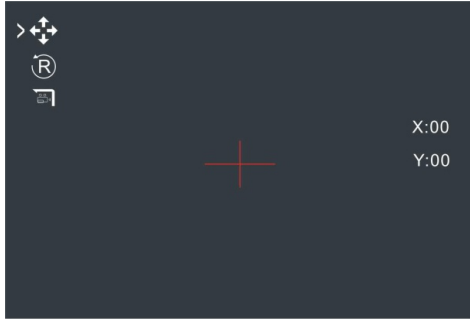

◆3. Check icon, (R) press the button ← You can restore the position of the reticle to the coordinate origin;

◆4. After completing the calibration, press the button ⏻ Toggle selected icon ☑, press the button ← To return to the menu;

◆5. After performing the correct operation according to the above steps, the calibration should be completed at this time. If there is still deviation, please go back to step 1 and adjust again.


【note】The X and Y coordinate values displayed on the screen indicate the offset from the center of the screen.

13

OPERATING INSTRUCTIONS

【Change the reticle style and color】

◆1. Select "Reticle Setting" in the menu interface, press the button ⏻ Enter the crosshair setting submenu;

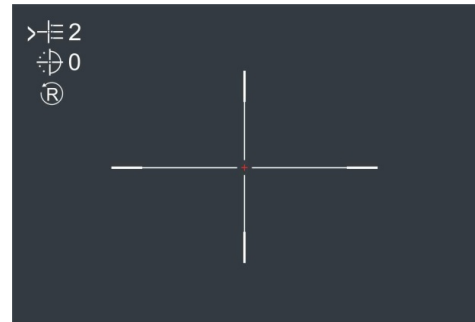

◆2. Check icon ⏻, press the button ←→ Toggle cross-hair type, Toggle cross-hair type: ⏻

◆3. Check icon ⏻, press the button ←→ Toggle the crosshair color, Select button ⏻ to confirm;

◆4. Press ⏻ again to confirm and save and exit to return to the menu.

14

OPERATING INSTRUCTIONS

【WIFI on and off】

◆Select in the menu interface "WIFI", Press the button ⏻ to enter the select whether to open the WIFI option submenu;

◆After opening, the WIFI account (SSID) and password (WP2A) will be displayed;

◆After the mobile phone is successfully connected to WIFI, open the app to transmit the image in real time.



15

OPERATING INSTRUCTIONS

【Digital zoom】

◆Select "Dzoom" in the menu interface and press ⏻ to enter the digital zoom selection submenu;

◆The digital zoom factor of this machine is 3 times, that is, it zooms in 3 times on the basis of optical magnification. This machine subdivides it into 10 levels;


◆For options in the digital zoom menu, when you press the right button → for digital zoom, you need to press it several times to reach the maximum 3x digital magnification.



16

OPERATING INSTRUCTIONS


【Brightness】

- ◆ Select "Brightness" in the menu interface and press  to enter the screen brightness selection submenu;
- ◆ Divided into 1-9. Can be adjusted according to the use environment and personal habits.



OPERATING INSTRUCTIONS


【Color mode settings】


- ◆ Select "Color" in the menu interface, and press  to enter the color mode selection submenu;
- ◆ It includes four color modes: normal, black and white, sepia, and green, which can be adjusted according to the environment and personal usage habits.



OPERATING INSTRUCTIONS


【Loop recording】

- ◆ Select "Loop Recording" in the menu interface and press  to enter the video recording length selection submenu;
- ◆ There are four options: off, 3 minutes, 5 minutes, and 10 minutes. When set to off, the file saved for each recording is a separate video file. When the other three options are selected, the file saved in each recording is automatically divided into several small files according to the duration of the option.

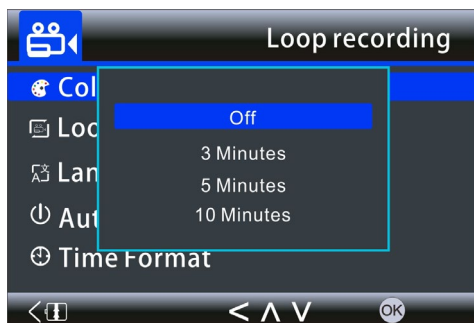

OPERATING INSTRUCTIONS


【language settings】

- ◆ Select "Language" in the menu interface and press  to enter the language setting submenu;
- ◆ The supported languages of this machine are: English, Simplified Chinese, French, Spanish, German, etc.



OPERATING INSTRUCTIONS

【Auto Power Off】

◆ Select "Auto Power Off" in the menu interface and press  to enter the auto power off time selection submenu;

◆ The option "Off" means that the machine will not shut down automatically;


◆ The options "3 minutes", "5 minutes" and "10 minutes" mean that the machine will automatically shut down if there is no operation within the set time.




21

OPERATING INSTRUCTIONS

【Time format】

◆ Select "Time Format" in the menu interface, and press  to enter the time format selection submenu;


◆ The options "24H" and "12H", users can choose according to your habits.

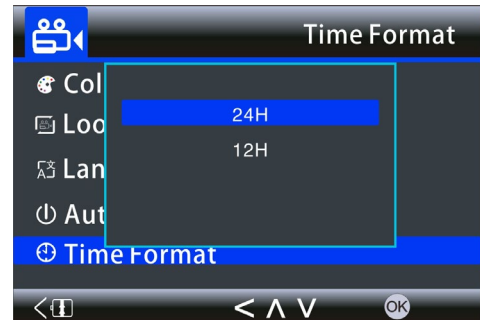




22


OPERATING INSTRUCTIONS

【Date/time】

◆ Select "Date/Time" in the menu interface and press  to enter the date/time setting submenu;

◆  The button controls the selection cursor bar to move between each setting item;

◆ Left button  and right button  change the parameter value of the selected cursor bar position;


◆ After confirming, press the button  once to exit the date/time setting submenu.




23

OPERATING INSTRUCTIONS

【Format】

◆ Select "Format" in the menu interface and press  to enter the format setting submenu;

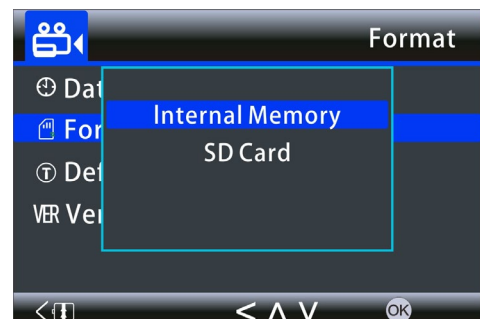

◆ Used to format the internal memory or SD card.




24

OPERATING INSTRUCTIONS

【Default setting】


- ◆ Select "Default Settings" in the menu interface and press  to choose whether to restore to the default settings;
- ◆ Choose "Confirm", "Cancel", press  to confirm and restore to factory default settings.

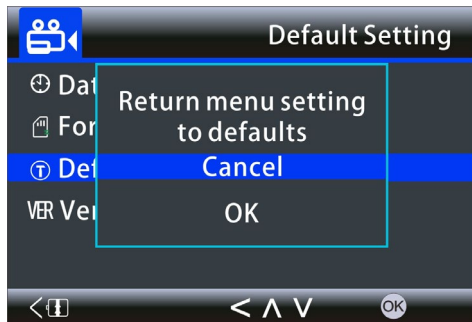

25

OPERATING INSTRUCTIONS

【VER version number】

- ◆ Select "Version" in the menu interface and press  to view the current software version.



26

MAINTENANCE

【Maintenance】

◆ It is recommended to maintain the product properly to ensure its service life. Attempts to disassemble or repair the device will void the warranty. It is recommended that when the machine gets dirty, wipe it clean with a dry or slightly damp cloth. Blow away dust and debris on all optical components, and then clean the lens with a lens cleaning cloth. To remove oil stains or dry water spots, apply a small amount of denatured alcohol to the lens cloth or cotton swab. Clean the lens surface and let it dry. Finally, exhale again to clean the lens. No further maintenance is required.

【Troubleshooting】

Never ship back a product without getting proper authorization beforehand. Doing so could result in losing the product due to a multitude of reasons, i.e. sending it to the wrong address and other problems associated with unexpected packages.

27

TROUBLESHOOTING

◆ The unit will not turn on

1. Check the polarity of the batteries. Reinstall the batteries if necessary.
2. Clean the battery compartment contacts with denatured alcohol and a cotton swab.
3. Install fresh batteries.

◆ The IR illuminator will not turn on:

1. Adjust the brightness of the IR. Adjust the display brightness. If no IR light is being detected the unit may need to be returned for service.

◆ The image is dark

1. Make sure the lens caps on the objective lens is opened and the IR illuminator is on. Adjust the display brightness and the IR illuminator brightness accordingly to obtain a bright, clear image.

◆ There are light or black dots on the display:

1. The presence of dots on the display is caused by sensor production technology and is not a defect. No action is required.

28

TROUBLESHOOTING

◆The image is not in focus:

1. Make sure there is no dust or condensation covering the objective lens or eyepiece.
2. Adjust the focus ring near the objective lens to adjust focus for different viewing distances.
3. Make sure to adjust the diopter setting on the eyepiece for your specific vision.

◆The image is flickering:

1. This is common if the unit is viewing or pointing in the direction of a bright light source. Cease viewing the bright light source immediately. If flickering in normal dark conditions the unit may need to be returned for service.

【Firmware Update】

Please visit <http://www.trgdtec.cn/support> for updates and instructions.

BASIC PARAMETERS

【Basic parameters】

Type	Items	Parameter value
Optical performance	Magnification	3.7X~11X
	Objective lens aperture	50mm
	Field of view (3.7X), m/1000	8°,140m/1000m
	Eyepiece adjustment range	±6 Diopter
	Low light observation distance	2m~∞
	Matte and black observation distance	~600m

PRODUCT DESCRIPTION

【The standard configuration】

Name	Amount
USB cable	1
Color box	1
Portable soft case	1
External power adapter	1
Separate battery charger	1
user's manual	1
Infrared flashlight	1
Battery	1
Lens cloth	1

PRECAUTIONS

【Use environment and precautions】

The night vision device should be stored in a soft bag. The operating environment should be -30~+55°C, and the relative humidity should not exceed 80%.

The night vision device should be stored in a clean and dry place to avoid damp, mold, heavy pressure, mechanical damage, humidity, and solar radiation.

Try to avoid rain or fog to prevent falling, bumping, and bumping. When you find that the image on the display screen is jumping, the green grid lines or the screen does not light up, it indicates that the voltage is too low, and it needs to be charged in time.

If you need to clean the optical surface of the objective lens, eyepiece, and laser illuminator, you should first blow off small grit and dust, and then wipe the surface with a soft cloth.

If the night vision device is not used for a long time, please keep the battery charged frequently to prevent the rechargeable battery from failing.

